



FUNNY FARM BANK

AGES 3 & UP

Instructions

BASIC PLAY:

Press the Funny Farm Bank sign and hear the Funny Farm song. At the end of the song one of the animals will randomly sound off.

ANIMAL PLAY ACTION AND SOUND:

Put a coin into any one of the 6 slots on the front of the bank and the corresponding door will spring open and that animal sound will play. Manually close the door to reset the spring loaded door. Example: Drop a coin into the PIGGY slot. Out pops piggy and says "oink, oink, oink!" Give the rooster on the roof a tap to see him bobble and hear him crow.

HIDE & SEEK MODE:

Randomly one of the six animals will make their sound. Put a coin into that animals slot. If you put a coin in the wrong slot you will get the trombone "wah wah" sound. Then the animal will repeat their call. This will repeat until you find the correct animal. Once you insert the coin into the correct animal slot you will hear the phrase "Close the door and press the sign to play again". After you press the sign a new animal will randomly sound.

WITHDRAWING COINS:

On the back of the bank there is a round door. Rotate counterclockwise to open and clockwise to close.

NOTE.

- If you walk away from the Funny Farm Bank the toy will put itself to sleep and play a "horse bye bye".
- Please discard the plastic coin key. This is only for the TRY ME function in the retail store.

INSTALLING/CHANGING THE BATTERIES:

Your new Funny Farm Bank requires 2 x 'AA' batteries (included). Use a Philips screwdriver to loosen the screw on the battery compartment cover located on the back of the bank and lift the cover. Install 2 x 'AA' batteries into the compartment, being careful to match the polarity as indicated (+ and -). Replace the cover over the compartment and tighten the screw.

BATTERY CAUTION: READ AND SAVE THESE INSTRUCTIONS.

Only adults should replace batteries. Do not mix old and new batteries or different types of batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of old batteries promptly and properly. Do not burn or bury batteries. Replace the batteries when the Funny Farm Bank stops operating properly. Batteries can leak chemicals and harm electronic parts, so remove them if you do not plan to use your bank for several weeks.

SUMMIT[™]
Toys with a twist



- Use only fresh batteries of the required size and recommended type.
- Never use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Be sure the batteries are inserted with the correct polarity.
- Exhausted batteries are to be removed from the bank.
- The supply terminals are not to be short-circuited.

COMPLIANCE WITH FCC REGULATIONS:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.