

Animal Caller

Animal Caller Instructions

Have you ever wondered what it would be like if you could be, or at sound, like the King of the jungle? How about a monkey or an elephant? How awesome would it be to sound like the Kookaburra, an exotic jungle bird! Well, now is your chance to do just that with your new Backyard Safari Animal Caller! Ready to ROAR!!!! Then let's get to it!!

CONTAINS

1 Backyard Safari Animal Caller.

INSTALLING/CHANGING THE BATTERIES:

The Backyard Safari Animal Caller requires 3 AA batteries. Alkaline batteries are recommended. Never use rechargeable batteries.

You will need a small screwdriver to remove the cover and access the battery chamber.

1.) Using a Phillips screwdriver, loosen the screw on the battery compartment cover located on the underside of the Animal Caller. Remove the cover completely.

2.) Place the new batteries in the compartment as indicated by the Polarity symbols.

USING THE ANIMAL CALLER:

Carefully remove your new Backyard Safari Animal Caller from its package, inspect it for damage and read all the instructions thoroughly before use.

Once free from the packaging, install the batteries as instructed and make sure to wipe of the mouth piece. Ready, GREAT! Now then, underneath your Animal Caller there is an on/off switch, see it? Okay, turn the switch to ON. Next you will notice a line of animal decals along with a slider switch, find it? Terrific! Slide the selector over to the animal whose "voice" you want to try...READY.....SET....BLOW! Don't forget that when you blow into the mouth piece, your animal will call out at regular volume, BUT...if you want to sound like the King of the jungle, blow harder! Your new Backyard Safari Animal Caller is very special because its breath activated, meaning the harder you blow into it, the louder the animal call will be! Cool, huh? So, how loud can you ROAR!!! Remember, this is for fun, so never blow the Animal Caller directly into the face or ears of another person or animal.

CARING FOR THE ANIMAL CALLER:

Keep the Animal Caller clean and dry. If it does get wet, wipe it dry immediately.

Use under normal, and safe play conditions only.

When not in use, store the Animal Caller in a clean, dry area and do not leave it exposed to the elements.

Watch for any cracks or damage.

Occasionally after use, wipe the Animal Caller off with a damp cloth before putting it away. And ALWAYS wipe off the mouth piece before use or when sharing it with friends!

Remember, if you follow the instructions, keep the Animal Caller clean and remember not to leave it outside, it will provide you with tons of fun.

CAUTION

Do not leave your Animal Caller outside or exposed to the elements.

The Animal Caller is intended for safe play only.

NEVER, EVER BLOW the Animal Caller directly into the face or ears of anyone; this includes your pets and other animals. Doing that could cause pain or injury and we're supposed to be having FUN!

Always wipe off the mouth piece of the Animal Caller before using it or sharing it with friends.

When cleaning the Animal Caller, USE ONLY WATER AND NEVER HOUSEHOLD PRODUCTS, not even window cleaner.

BATTERY CAUTION

Only adults should replace batteries. Do not mix old and new batteries or different types of batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of old batteries promptly and properly. Do not burn or bury them.

Any batteries installed in your Animal Caller are for demonstration purposes only and we make no warranty as to the battery life. Replace the batteries when the Animal Caller stops operating properly.

Batteries can leak chemicals and harm electronic parts, so remove them if you do not plan to use your Animal Caller for several weeks.

- Use only fresh batteries of required size and recommended type.
- Never use rechargeable batteries.
- Non-rechargeable batteries are not to be charged.
- Be sure the batteries are inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

SUMMIT™

Toys with a twist

© 2008 Summit Products, LLC.

Trussville, AL 35173

PRINTED IN CHINA