 



BACKYARD SAFARI OUTFITTERS™ DUAL POWER FLASHLIGHT

Figure A.

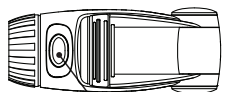

3-position switch

 Figure B.

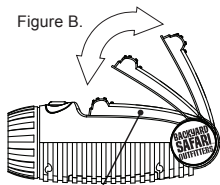

Crank storage position

INSTRUCTIONS:

 
The 3 LED lights are controlled by a 3-position switch. (Figure A.) Slide the switch left for all 3 lights to illuminate using battery power. Slide the switch right to use hand crank power. Slide the switch to the middle position to turn off the Flashlight.

• **Using the Flashlight via the hand crank:** Open the crank from its storage position against the flashlight. Crank the flashlight in a back and forth movement. (Figure B.) Cranking it for 1 minute gives you over 30 minutes of light. Excess cranking will not hurt the unit.

• **Using the Flashlight with the battery:**

Slide the 3-position switch right for all 3 LED lights to illuminate using battery power.

NOTE: Keep switch in the off position when not in use.

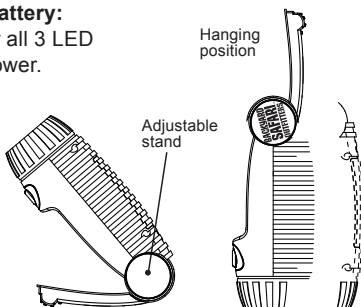

CARE AND MAINTENANCE:

- Keep the Flashlight clean and dry. If any part of the Flashlight gets wet, wipe it dry immediately. Use and store indoors, in environments which maintain normal temperatures.
- Handle the Flashlight carefully and do not drop it.
- Occasionally wipe the Flashlight with a damp cloth to keep it clean and looking new. Do not allow water in or near the Flashlight as this may damage the device.

⚠ BATTERY CAUTION:

READ AND SAVE THESE INSTRUCTIONS.

Only adults should replace batteries. Do not mix old and new batteries or different types of batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of old batteries promptly and properly. Do not burn or bury batteries.

Replace the batteries when the Flashlight stops operating properly or becomes dim. Batteries can leak chemicals & harm electronic parts, so remove them if you do not plan to use the Flashlight for several weeks.

- Use only fresh batteries of the required size and recommended type.
- Never use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Be sure the batteries are inserted with the correct polarity.
- Exhausted batteries are to be removed from the Flashlight.
- The supply terminals are not to be short-circuited.

INSTALLING/CHANGING THE BATTERIES:

Your new Flashlight requires 2 x 'AA' batteries (INCLUDED). Use a Philips screwdriver to loosen the screw on the battery compartment cover and lift the cover. Install 2 x 'AA' batteries into the compartment, being careful to match the polarity as indicated (+ and -). Replace the cover over the compartment and tighten the screw.

COMPLIANCE WITH FCC REGULATIONS:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SUMMIT[™]
Toys with a twist

© 2009 Summit Products, LLC.
Birmingham, AL 35205
www.summittoy.com
Made and Printed in China