



## DIEGO MINI BUG VAC Instructions

Congratulations on getting your new Diego Mini Bug Vac! You are going to be an expert explorer in no time! So, let's get started!

### CONTAINS

1 Diego Mini Bug Vac.

### USING THE DIEGO MINI BUG VAC:

Carefully remove your new Diego Mini Bug Vac from its package, check it for any damage and read all the instructions thoroughly before use.

Next, find an insect you would like to rescue. Place the nose cone over the bug, making sure the trapdoor is open, and squeeze the trigger until the insect has been pulled up into the rescue capsule. Use only enough vacuum power to gently pull the bug into the capsule. Once the insect is inside the rescue capsule, quickly close the trapdoor. You may then safely examine the insect, release it or transfer it into an appropriate habitat such as the Nature Pack. If you're going to keep the insect, simply place the nose cone over the opening of the chosen habitat, turn the knob to open the trapdoor and let the bug slide into its new home. Don't forget to put the cover back on the habitat or all your hard work will be for nothing. Now, if you wish to release the insect, again, turn the knob to open the trap door and let the insect crawl out. It really is that easy and that fun! But don't forget, if you choose to keep the insects, you are now responsible for their care. That means you must provide food, water and a safe, clean air filled habitat. You will also need to make sure the habitat is kept in a quiet area away from younger children and pets who may become overly curious and accidentally harm the habitat and the insects inside.

### CARING FOR THE DIEGO MINI BUG VAC:

Keep the Diego Mini Bug Vac clean and dry. If it does get wet, wipe it dry immediately.

Use under normal, and safe play conditions only.

When not in use, store the Diego Mini Bug Vac in a clean, dry area and do not leave it exposed to the elements.

Occasionally after use, wipe the Diego Mini Bug Vac off with a damp cloth before putting it away.

When cleaning your Diego Mini Bug Vac, NEVER use house hold cleaning products, not even window cleaner. WATER ONLY!

Remember, if you follow the instructions, keep the Diego Mini Bug Vac clean and dry, it will provide you with tons of fun.

### CHANGING/INSTALLING THE BATTERIES:

The Diego Mini Bug Vac requires 4 AAA/R3/R03 batteries. Alkaline batteries are recommended. Never use rechargeable batteries.

- 1.) Using a Phillips screwdriver, loosen the screw on the battery compartment cover on the underside of the handle. Remove the cover completely.
- 2.) Now, place the new batteries in the compartment as indicated by the polarity symbols (+ / -).
- 3.) Replace the cover and tighten the screw.

### ⚠ CAUTION

Do not leave your Diego Mini Bug Vac outside or exposed to the elements.

Do not use or point the Diego Mini Bug Vac at people or animals.

Do not try to pick up other small objects, such as coins or rocks. The Diego Mini Bug Vac is intended only to be used on bugs and insects, trying to pick up other objects may clog the vacuum.

**DO NOT USE THE DIEGO MINI BUG VAC to collect HORNETS, BEES or WASPS! DO NOT COLLECT ANY INSECT/BUG THAT MAY BITE OR STING IF FRIGHTENED!!**

**DO NOT USE THE DIEGO MINI BUG VAC to disturb BIRD'S NESTS or the home of any animal.**

Lastly, remember you are using the Diego Mini Bug Vac to explore and learn about living creatures in nature. Keep the bugs in a proper, food, water and air filled habitat where they can be safe OR look, learn and then let them go safely back where you found them. Remember, it is your responsibility to use the Diego Mini Bug Vac correctly. Always respect nature.

## **BATTERY CAUTION**

Keep packaging as it contains Important Information.

**CAUTION:** To prevent battery leakage:

Be sure to insert batteries correctly and always follow the product and battery manufacturers' instructions.

Different types of batteries or new and used batteries are not to be mixed (replace all batteries at the same time).

Never mix Alkaline, standard (Carbon Zinc) or rechargeable (Nickel-Cadmium) batteries.

Only batteries of the same or equivalent type as recommended are to be used.

Do not use RECHARGEABLE batteries, unless specified.

Non-rechargeable batteries are not to be recharged.

Rechargeable batteries are to be removed from the product before being charged (if removable).

Rechargeable batteries are only to be charged under adult supervision (if removable).

Always remove exhausted or dead batteries from the product.

Remove batteries from product before extended storage.

The supply terminals are not to be short-circuited.

Batteries are to be inserted with correct polarity.

Batteries may explode or leak if misused.

**ATTENTION:** Battery / Batteries should be installed by an adult only. The batteries included in this toy are intended for in-store demonstration only and we make no warranty as to the battery life.



### **WARNING:**

CHOKING HAZARD - Small parts  
Not for children under 3 years

# **SUMMIT™**

*Toys with a twist*

© 2008 Summit Products, LLC.

Trussville, AL 35173

**PRINTED IN CHINA**

©2008 Viacom International Inc. All Rights Reserved.

Nickelodeon, Nick Jr., Dora the Explorer and all related titles, logos and characters are trademarks of Viacom International Inc.

