

Channel Surfer

Instruction Sheet

Contents:

- 1 Remote Control


Installing Batteries:

Channel Surfer uses 2 x AAA batteries (not included).
Suggest using a good quality alkaline batteries.

1. Use a Phillips screwdriver to loosen the screw on the battery compartment cover, then lift up the cover.
2. Put the batteries into the compartment using care to match polarity (+/-) as marked inside.
3. Replace the cover and tighten the screw.

CAUTION:

- Only adults should replace batteries.
- Do not mix old and new batteries.
- Do not mix different types of batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Use only fresh batteries of the required size and the recommended type.
- Dispose of old batteries promptly and properly. Do not burn or bury them.

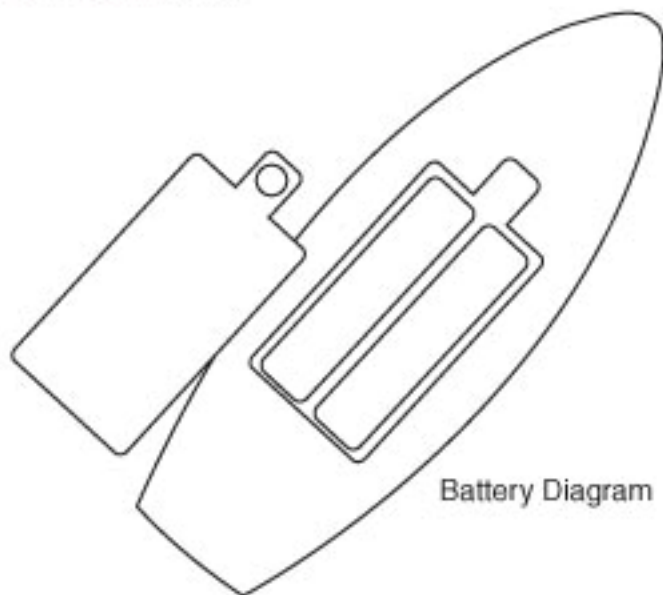

Set Up:

NOTE: Channel surfer must be programmed with your T.V.'s correct code to order operate properly.

1. Locate the enclosed T.V. code list and locate your T.V. brand on the list.
2. Power on your T.V
3. Press and hold the "Enter" key and the number "0" key together for 3 seconds, the LED indicator will light up.
- 4 Use the Number keys to enter your T.V.'s 3 digit code.
5. Once the correct code has been entered the LED indicator light and your T.V. will power off.



6. If an invalid code has been entered the LED indicator will blink 3 and your T.V. will remain on. Repeat steps 3 TO 5 using other codes listed for your brand.

NOTE: If your brand is not listed in the T.V. code list try the "Auto Search Method" to program.

Auto Search Method:

1. Power on your T.V.
2. Press and hold the "Enter" key and the "On/Off" key together for 3 seconds. The LED indicator will blink.
3. The Channel Surfer will search for a correct code for your T.V. automatically.
4. Your T.V. will power off when a correct code is found.
5. Press any key within 2 seconds to save the code. The LED indicator light will then turn off.

NOTE: If the code searched does not work for all the keys repeat steps 1 to 5 to try another code.

Code Retrieval:

NOTE: Programming may be lost when changing the batteries.

1. Press and hold the "Enter" key and the number "1" key together, the LED indicator will *blink*. The number of *blinks* represents the number of the first digit of the code.
2. Press and hold the "Enter" key and the number "2" key together, the LED indicator will *blink*. The number of *blinks* represents the number of the second digit of the code.
3. Press and hold the "Enter" key and the number "3" key together, the LED indicator will *blink*. The

number of *blinks* represents the number of the third digit of the code.

To Operate TV:

1. Press the "ON/OFF" button to turn your T.V. on.
2. Press the "Surf" button and the channels will change every 5 seconds automatically.
3. Press the "surf" button a second time to stop on the desired channel.
4. Use the numerical buttons to manually select the channel desired, then press "Enter".
5. Use the up and down "Channel" keys to manually scroll through the channels.
6. Use the up and down "Volume" keys to adjust the volume.



© 2004 Summit Products, Inc.
Trussville, AL 35173
Printed in China.

TV Code list

Item number YCS01-NI

TV Brand	TV Codes	TV Brand	TV Codes
A-mark	002	Dumont	004, 006
Abex	012	Dwin	057, 058
Admiral	024	Electroband	041, 061
Adventure	014	Electrohome	048, 067
Aiko	023	Emerson	006, 013, 037, 038, 039, 040, 041, 044, 046, 047, 051, 055, 056, 062, 067, 075, 076
Akai	011	Envision	011
Alaron	039	Fisher	030, 033, 070
Allegro	057, 058	Fugitsu	039
Ambassador	037	Funai	036, 039, 040
Anam	019, 040	Futuretech	040
AOC	002, 006, 011, 041	GE	008, 010, 024, 047, 050, 059, 060, 066
Archer	002	Gibraltar	004, 006
Audiovox	002, 023, 040, 050, 055	Goldstar	001, 006, 011, 013, 020, 064, 067
Aumark	021	Go Video	021
Baysonic	040	Gradiente	017, 020
Belcor	006	Grunpy	039, 040
Beuamark	004, 011, 039	Harman	018
Bradford	040	Harman/Kardon	018
Broksonic	002, 044, 051	Harley Davidson	039
Brokwood	006	Harvard	040
Candle	011, 014, 020, 042	Hitachi	012, 020, 027, 062, 063, 067, 072, 077
Carnivale	011	Infinity	018
Carver	018	Inteq	004
Celebrity	061	Janeil	014
Cineral	023, 050	JBL	018
Citizen	011, 013, 014, 020, 021, 023, 042, 046	JC Penny	072
Clairtone	041	JCB	061
Concerto	020	JVC	017, 067, 072
Contec	032, 040, 041, 067	KEC	040
Contec/cony	072	Kenwood	006
Craig	040	Kloss	009, 014
Crosley	018	KTV	013, 040, 041, 046, 067
Crown	013, 040	LG	020
CXC	040	Luxman	020
Curtis Mathes	011, 013, 018, 020, 021, 024, 027, 035, 050, 052, 059, 060, 067	LXI	004, 018, 030, 031, 060, 070, 071
Daewoo	006, 013, 023, 050, 055, 056	Magnavox	007, 009, 011, 018, 025, 036, 039, 042, 043, 049, 065, 067
Daytron	006, 013	Marantz	011, 018
Denon	027	MEI	041

Majestic	003	Sansui	051
Matsushita	045	Sanyo	028, 030, 033, 070
Megatron	002, 027	Scotch	038
Memorex	003, 020, 021, 028, 030, 045	Sears	015, 018, 020, 028, 030, 031, 033, 036, 038, 039, 070, 071, 072
MGA	006, 011, 029	Semivox	040
MGA/Mitsubishi	073	Semp	031
Midland	004, 012, 013	Sharp	013, 024, 032, 034, 049, 081, 067
Minutz	008	Shogun	006
Mitsubishi	006, 024, 028, 038	Signature	003
Motorola	019, 024	Silvania	007, 009, 011, 025, 042
MTC	006, 011, 020, 021, 041	Simpson	042, 043
Multitech	040	Sony	026, 061
NAD	031, 035, 038, 071	Soundesign	038, 039, 040, 042
National	019	Spectrticon	002
NEC	006, 011, 020, 053	Squareview	036
Nikko	004, 011, 015, 023, 030, 031, 038, 060	SSS	040
Noshi	005	Starlite	040
NTC	023	Supre-Macy	014
Onwa	040	Supreme	061
Optimus	030, 035, 045	Sylvania	018, 043, 048, 065, 069
Optonica	024, 034	Symphonic	036
Orion	039, 044, 051	Tandy	024
Panasonic	001, 015, 016, 017, 018, 019, 021, 024, 027, 028, 030, 031, 034, 038, 045, 060	Tatung	002, 019, 071
Penney	002, 005, 006, 008, 010, 011, 012, 013, 015, 016, 020, 021, 031, 038, 060, 067	Technics	004, 015, 016, 045, 060
Philco	006, 007, 009, 011, 018, 094, 027, 042, 043, 051, 065, 067	Technika	003, 006, 013, 018, 020, 021, 023, 028, 039, 040, 042, 072
Phillips	004, 005, 006, 007, 008, 009, 013, 018, 036, 061, 065, 082, 067	TMK	020, 037, 038
Pilot	006, 011, 013	Toshiba	021, 030, 031, 070, 071, 072
Pioneer	035, 062	Tosonic	041
Portland	006, 013, 023, 067	Totevision	013, 067
Prism	016	Trical	032
Proscan	011, 015	Universal	008, 010
Proton	002, 038, 052, 067	Vector Research	011
Pulsar	004, 006	Victor	017
Quasar	016, 019, 034, 045	Vidikron	018
Radio Shack	006, 012, 013, 015, 020, 030, 034, 038, 040, 067, 070	Vidtech	006, 038
RCA	005, 006, 015, 016, 022, 024, 059, 060, 062, 078	Viking	014
Realistic	011, 012, 013, 020, 030, 034, 038, 040, 070, 075	Wards	007, 008, 010, 011, 018, 020, 025, 026, 031, 034, 038, 039, 043, 065, 066
Rhapsody	041	Westinghouse	055, 056
Runco	004, 011, 053, 054, 080	Words	003, 006
Sampo	011, 012, 013	Yamaha	006, 011
Samsung	011, 012, 013, 020, 021, 038, 067, 079	Zenith	003, 004, 023, 028
Samsux	013	Zonda	002
Sansei	050	Some Models	068