

Ages 8+



ATM Savings Bank



Your new ATM Savings Bank works just like a real Bank Machine! Using your bank card to access your account or the combination lock on the vault, saving money is easy!

READ AND SAVE THESE INSTRUCTIONS.

Only adults should replace batteries. Do not mix old and new batteries or different types of batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Use only fresh batteries of the required size and recommended type. Dispose of old batteries promptly and properly. Do not burn or bury batteries. If you do not plan to use your ATM for several weeks, remove the batteries. Batteries can leak chemicals that can harm electronic parts. Replace the batteries when the ATM stops operating properly or the display becomes dim. (Note: Removing the batteries will reset the account balance to zero.)

1. Installing/replacing batteries.

Use a Phillips screwdriver to loosen the screw on the battery compartment and lift the cover. Install 4 x AA batteries into the compartment, being careful to match the polarity as indicated (+ and -). Replace the cover over the compartment and tighten the screw.

Press the ON button to turn on the bank. The camera light will flash and the bank will be ready to use.

Note: The bank will automatically turn off if it is not used for 30 seconds.

2. Making a deposit.

To deposit coins, simply insert a coin into the slot which matches the coin's value.

Note: If the value of the coin inserted does not match the value indicated by the slot, the balance will be incorrect.

To deposit bills, insert one bill at a time into the bill slot and turn the knob clockwise. (Never turn the knob counter-clockwise!) Press the DEPOSIT button and press the button which identifies the value of the bill.

3. Opening the vault door and making a withdrawl.

To withdrawl money from your ATM Savings Bank, locate the two-digit combination on the bottom of the Bank. Turn the knob on the vault door counter-clockwise until the first number lines up with the triangle. Then turn the knob clockwise until the second number lines up with the triangle. Pull the knob and open the door.

Remove the money you would like to withdrawl and press the WITHDRAWL button. Press the appropriate buttons for the bills and/or coins you remove. If you remove more than one, simply press the button more than once.

4. Checking your balance.

Press the ACCOUNT BALANCE button or insert the bank card. Your current account balance will be displayed on the screen.

⚡ **Keep your ATM Savings Bank clean and dry. If any part of the Bank gets wet, wipe it dry immediately. Use and store the bank indoors, in environments which maintain normal temperatures.**

⚡ **Handle the Bank carefully and do not drop it.**

⚡ **Occasionally wipe the Bank with a damp cloth to keep it clean and looking new. Do not allow water in or near the electronic slot, as this may damage the device.**

⚡ **Modifying or tampering with the ATM Savings Bank's internal components can cause it to malfunction and will void any warranty.**

COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



© 2007 Summit Products, Inc.
Trussville, Alabama 35173
Made and Printed in China

