

# Teller Machine

## Instruction Sheet

Your ATM Bank encourages you to save money! It's like a real Bank Machine. You can keep your money safe because it has a unique combination lock on the vault door and your bank card is required to access your balance. The coin slot recognizes the amount of each coin and makes a real dropping sound.

### INSTALLING BATTERIES

Your bank requires two AA batteries.

- 1.) Use a Phillips screwdriver to loosen the screw on the battery compartment cover on back of the unit, and then lift up the cover.
- 2.) Put the batteries into the compartment using care to match the polarity (+ and -) as marked inside.
- 3.) Replace the cover and tighten the screw.

### BATTERY CAUTION

Only adults should replace batteries. Do not mix old and new batteries or different types of batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of old batteries promptly and properly. Do not burn or bury batteries.

The batteries installed in your Teller Machine are for demonstration purposes only and we make no warranty as to the battery life. Replace the batteries when the Teller Machine stops operating properly or the display becomes dim. Batteries can leak chemicals and harm electronic parts, so remove them if you do not plan to use your Teller Machine for several weeks.

- Use only fresh batteries of required size and recommended type.
- Never use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Be sure the batteries are inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

### TO TURN ON YOUR BANK

Press the ON button to turn on your bank, the camera eye will flash. The unit is now ready to deposit or withdraw your savings as instructed below.

**Note:** To save batteries, the bank will turn off automatically if not used for 30 seconds.

### TO DEPOSIT

To deposit coins, simply insert coins to the corresponding value slot.

**Note:** Make sure coins insert into the correct coins slot, otherwise, the total amount of the unit will be different to the actual coins inside the storage compartment.

To deposit bills, insert it into the bill slot, and turn the knob clockwise (never turn counter-clockwise) to roll it into the bank. Press the "DEPOSIT" button and push the corresponding \$ value button.

### TO WITHDRAW

If you want to withdraw money, open the vault door (see "To open vault door") and remove the money. Then press the "WITHDRAW" button and press one \$ or ¢ button for the amount you've removed. (repeat above step if necessary.)

### TO OPEN VAULT DOOR

Find the two-number combination on the bottom of the bank. Turn the knob a couple of turns counter-clockwise until the first number gets to the triangle. Then turn it clockwise and stop when the second number gets to the triangle. Pull the knob to open the door.

### TO CHECK ACCOUNT BALANCE

Press the "ACCOUNT BALANCE" button, or insert the credit card. Your account balance is displayed on the LCD screen.

### TO RESET THE BANK

If your bank is not working properly, or cannot be turned on, press RESET next to the battery door on the back with a pointed object of the bank. If still not working, remove the batteries, wait about 1 minute, and then reinstall the batteries. The bank will reset and your account balance will be zero.

### CARE

Keep the bank clean and dry. If it gets wet, wipe it dry immediately. Use and store the bank in normal temperature environments only. Handle the bank carefully. Do not drop it. To keep it clean and looking new, wipe it with a damp cloth occasionally.

Modifying or tampering with the bank's internal components can cause a malfunction.

### COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



© 2008 Summit Products, LLC.  
Trussville, AL 35173  
PRINTED IN CHINA