

TOUCH SCREEN ATM

Ages 5 & up

Hello. Welcome to the New Zillions Touch Screen ATM Machine. With the touch of your finger, the advanced technology allows you to deposit and withdraw real money from an account you create. You even get to choose your own secret code! Now that's tight security! This amazing ATM can keep track of your savings too. Because of its' coin recognition and advanced bill reading system, the ATM is able to understand what is deposited into and withdrawn from your account.

So, with your personalized access card and secret code you really can deposit, check your balance or withdraw money from your very own private ATM vault.

Okay, what are you waiting for? Grab some coins and let's get going!

CONTAINS:

One Touch Screen ATM Machine, your personal ATM card and 3 AA batteries.

GETTING STARTED:

Remove your new Touch Screen ATM Machine from it's box and check for any cracks or damage. Everything okay? Great! Get your personal ATM card ready and remember, you will need to insert your ATM card each time you wish to access your account.

SETTING UP YOUR ACCOUNT:

Now, the fun begins! Okay, take your personal ATM card and insert it into the larger slot located at the front of the ATM Machine. Listen for a tone and wait for the screen to light up blue. PERFECT you're in, don't stop now! The screen will say "WELCOME NAME." After a few seconds, you will see all the letters of the alphabet appear on the touch screen keyboard. You can now type your name, up to 8 letters and don't forget to press the "ENTER" key to save your name. Next, the screen will tell you to "ENTER PIN." So, let's create a pin number only for you. This pin number will keep your account information secret and without it, you will not be able to log into your account. The good thing, is neither will anyone else! Using the "1" to "0" touch key, enter 1,2,3,4 by touching the screen directly and press "ENTER". This is only your preset pin number and you will soon be able to change it. Your screen should say "WELCOME ATM," "BALANCE," "DEPOSIT," and "WITHDRAWAL." Do, you see all that? Great, this means you are ready to change the pin number to one you chose. Press the "E" directly on the screen and your current pin number will appear on the 2nd row, go ahead and enter a 4-digit code to use as your personal pin number. Remember to press "ENTER" to save your new secret code number. Don't forget, the Touch Screen ATM turns on when you insert the ATM card and shuts off when you withdraw it. Each time you wish to check your balance or make a transaction, you will need to insert your ATM card and re-enter the personal pin number you just created. If the wrong pin number is entered three times, "INCORRECT CODE" will appear and the ATM will automatically turn off. How's that for security! To restart the ATM simply remove and then re-insert your ATM card. To turn the ATM OFF, remove the ATM card, the ATM will automatically turn off. Okay, that's it.you now have your very own ATM machine programmed with your name and personal pin number.

Note: Use a PIN number that will be easy to remember. If you forget your PIN number, press the RESET button on the back of the unit. PIN number will be reset to the preset PIN number.

MAKING A DEPOSIT:

After inserting your ATM card and entering your pin number, press the 'DEPOSIT' key seen on the screen. To deposit coins, simply insert them into the coin slot on the front of the ATM Machine and it will automatically identify the coins and the amount of the deposit. To deposit bills, insert ONE BILL AT A TIME into the bill feeder. The ATM will identify the amount deposited and display it on the top row of the screen. Press "ENTER" to confirm. Now, just in case you need to correct the amount deposited, you can enter the correct amount because the denominations of \$1, \$2, \$5, \$10, \$20, \$50, and \$100 will appear directly on the 2nd and 3rd rows of the touch screen. Once you have entered the corrected amount of the deposit, press the "ENTER" key to confirm the new amount.

Note: 1. You can try to deposit the bill again when the touch screen appear "CANNOT READ" by face down the bill.
2. If the account balance reaches \$999.99, "\$FULL" will be displayed and amount cannot be deducted.
3. To clear the account balance to zero or reset the unit, press the button on the back of the unit or remove and reinstall the batteries.

CHECKING YOUR BALANCE:

As always, you must insert your ATM card and enter your personal pin number. Then, simply press the "BALANCE" key directly on the screen keyboard. Your current account balance will be displayed on the screen.

OPENING THE VAULT DOOR AND MAKING A WITHDRAWAL:

If you have already logged into your account, press the "WITHDRAWAL" key seen on the screen. Next, enter the amount you wish to withdraw and press "ENTER." Once the door lock has been released, press the "OPEN" button to open the VAULT DOOR and remove the amount of money entered.

CHANGING THE NAME ON THE ACCOUNT:

After logging in, press the "C" key on the touch screen keyboard. The name you are currently using will appear on the top row. Just like before, you may enter up to 8 letters for your new name. Once you have picked the new name for your account, press "ENTER" and the new name will now appear on your account.



TO TURN OFF THE ATM

To turn the ATM OFF, remove the ATM card, the ATM will automatically turn off.
The blue color back light will automatically turn off if no keys are pressed within 45 seconds.

CARE OF YOUR NEW TOUCH SCREEN ATM MACHINE:

Keep the bank clean and dry. If it does get wet, wipe it dry IMMEDIATELY. Never leave the bank outside or expose it to direct sunlight or other elements. Handle the bank with care and when not in use, store it in a safe place. NEVER, EVER jam or force anything into your Touch Screen ATM Machine. The only things that should be inserted into your ATM Machine are money and your ATM card, anything else, may break the machine. To keep your new Touch Screen ATM Machine clean, occasionally wipe it with a SLIGHTLY DAMP cloth being very careful of the Touch Screen itself. Never use any household cleaners on your ATM Machine. Remember modifying, tampering with or mishandling the bank and its internal components can cause the bank to malfunction.

INSTALLING AND REPLACING BATTERIES:

The ATM requires 3 AA batteries.

- 1.) Use a Phillips screwdriver to loosen the screw on the battery compartment and lift the cover.
- 2.) Install 3 AA batteries into the compartment, being careful to match the polarity as indicated (+ and -).
- 3.) Replace the cover over the compartment and tighten the screw.



BATTERY CAUTION! READ AND SAVE THESE INSTRUCTIONS.

Only adults should replace batteries. Do not mix old and new batteries or different types of batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of old batteries promptly and properly. Do not burn or bury batteries.

The batteries installed in your ATM are for demonstration purposes only and we make no warranty as to the battery life. Replace the batteries when the ATM stops operating properly or the display becomes dim. Batteries can leak chemicals and harm electronic parts, so remove them if you do not plan to use your ATM for several weeks.

- Use only fresh batteries of the required size and recommended type.
- Never use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Be sure the batteries are inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

Note: Removing the batteries will reset the account balance to zero. Please set up your account including your name and PIN number again after new batteries installed. You can access your funds by following "OPENING THE VAULT DOOR AND MAKING A WITHDRAWAL" step after logged in.

COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

© 2007 Summit Products, LLC.
Trussville, Alabama 35173
Made and Printed in China

